



**OPERATION AND MAINTENANCE INSTRUCTIONS
FOR 8000 SERIES
ROOF TOP AIR CONDITIONERS
AND
CEILING PLENUMS**

**MODE D'EMPLOI ET UTILISATION
DES CLIMATISEURS DE TOIT DES
SÉRIES 8000 ET
PLÉNUM DE PLAFOND**

**RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204**

TABLE OF CONTENTS

I.	General Information	2
II.	Standard Ceiling Plenum Control Panel	2
III.	Standard Ceiling Plenum Operation	3
IV.	Maintenance	4
V.	Wall Thermostat Identification And Operation	6
VI.	Warranty Service	7

SECTION I - GENERAL INFORMATION

These air conditioners were designed to operate from a 115 VAC, 60 HZ, 1 Phase power supply. Anytime an air conditioner is not operating properly, the power supply should be examined by a qualified technician to verify that the air conditioner is receiving the proper power supply.

The ability of the air conditioner to maintain the desired inside temperature depends on the heat gain of the recreational vehicle.

The size of the vehicle, amount of window area, amount of insulation, direct exposure to the sun, outside temperature and the number of people in the recreational vehicle may increase the heat gain to such an extent that the capacity of the air conditioner is exceeded.

As a general rule, air entering the air conditioner will be cooled about 15 to 20 degrees, depending on the outside temperature and humidity conditions.

For example, if the air entering the return air grilles in the air conditioner is 80 degrees F, the air leaving the discharge grilles in the air conditioner will be 60 to 65 degrees F.

As long as this temperature difference is being maintained between the return air and discharge air, the air conditioner is operating at its capacity. If the desired inside temperature (normally 80 degrees F) cannot be maintained, then the heat gain of the RV is too great for the capacity of the air conditioner.

Parking the vehicle in a shaded area, keeping windows and doors shut and avoiding the use of heat producing appliances in the vehicle will help to reduce the heat gain. When possible, the addition of insulation and tinted glass (especially in uninsulated vans) should be considered.

NOTE

The optional Elect-A-Heat heating assembly is intended to take the chill out of the indoor air when the air is a few degrees too cool for comfort. The heating assembly is an effective "chill chaser". It is not a substitute for a furnace.

SECTION II - CONTROL PANEL

If your RV air conditioner is operated from the control panel located in the ceiling assembly, then there are three controls on the ceiling assembly that help you control the air conditioner. They are as follows:

A. The Selector Switch - The selector switch determines which mode of operation the air conditioner will be in. By rotating the selector switch, the operator can obtain any system function desired. System functions vary depending upon options of both the roof top unit and ceiling assembly. Figure 1 shows selector switch location and lists all available functions by model.

The "Operation" section explains the operational characteristics of each mode of operation.

B. The Thermostat (temperature control) - In the cooling mode, the thermostat regulates the "ON" and "OFF" temperature setting at which the compressor will operate.

For "Heat/Cool" models, the thermostat also controls the "ON" and "OFF" temperature settings of the heater assembly. See Figure 1.

C. Louvers - The louvers are located at both ends of the ceiling assembly shroud and are used in directing the discharge air from the unit.

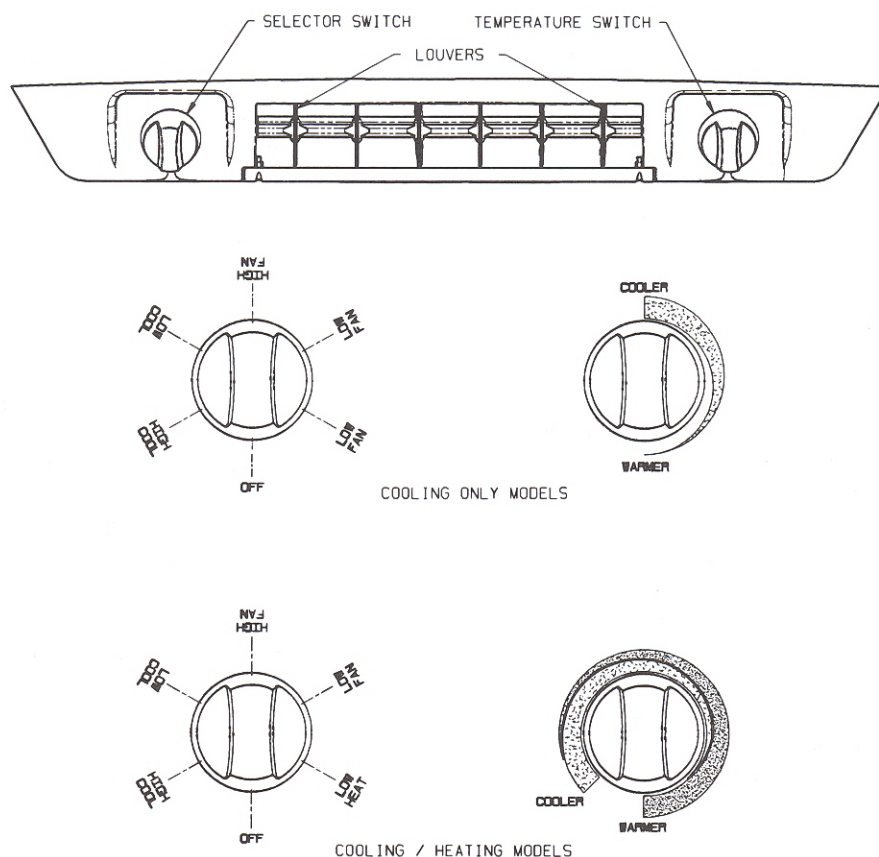


FIGURE 1

SECTION III - OPERATION

I. For Cooling (Refer to Figure 1, page 3).

- A. Turn the selector switch to the "LOW COOL" or "HIGH COOL" position.
- B. Rotate the thermostat (temperature control) to the position that is the most comfortable to you. The thermostat will turn the compressor on when the temperature of the air entering the air conditioner rises a few degrees above the setting you have selected. Then the temperature of the air entering continues to cycle the compressor on and off in the above mentioned fashion until the selector switch is turned to another mode of operation.
- C. Position the louvers to the desired direction the discharge air is to flow.

Note: The fan operation is constant, only the compressor cycles on the thermostat.

II. Operation During Cooler Nights (Cooling Operation).

It is important, when the outdoor temperature drops in the evening or during the night to below 75 degrees F, that the thermostat (temperature control) be set at a midpoint between "Warmer" and "Cooler". If the setting is at "Cooler", the evaporator coil may become iced-up and stop cooling. During the day when the temperatures have risen above 75 degrees F, reset the thermostat switch to the desired setting.

NOTE

Should icing-up occur, it is necessary to let the cooling (evaporator) coil defrost before normal cooling operation is resumed. During this time, operate the unit in the "HIGH FAN" position with the system at maximum air flow. When increased or full air flow is observed, the cooling coil should be clear of ice.

III. Short Cycling

When an air conditioner is in operation, its compressor circulates refrigerant under high pressure. Once off, it will take two to three minutes for this high pressure to equalize.

The air conditioning compressor is unable to start against high pressure. Therefore, once the air conditioner is turned off, it is important to leave it off for two to three minutes before restarting.

Short cycling the compressor (or starting it before pressures have equalized), will in some instances, kick the circuit breaker or overload.

IV. For Heating ("Elect-A-Heat" Ceiling Assembly Model Only) Refer To Figure 1, page 3).

The optional Elect-A-Heat heating assembly is intended to take the chill out of the indoor air when the air is a few degrees too cool for comfort. The heating assembly is an effective "chill chaser". It is not a substitute for a furnace.

Do not expect the heating coil on your heater to glow. Because the fan draws in cold air and forces it over the coil, the coil will not turn red. A hint of red may occur where the moving air does not directly touch the coil.

- A. Turn the selector switch to the "LOW HEAT" position. At "LOW HEAT", the fan operates on low speed with heat output at maximum.
- B. Rotate the thermostat (temperature control) switch to the position that is the most comfortable to you. The thermostat will turn the heater on when the

temperature of the air entering the air conditioning unit drops below this setting a few degrees and automatically turns off when the temperature of the air entering the air conditioner rises a few degrees above this setting. The heater will continue to cycle on and off in this fashion until the selector switch is turned to another mode of operation.

- C. Position the louvers to the desired direction the discharge air is to flow.

Discharge air temperature can be controlled to some extent by opening or closing the louvers.

When the louvers are closed, the warmest localized discharge air is achieved. Fully opened louvers will throw the warm discharge air to the back and front of the vehicle for more efficient circulation and faster warm-up. Although the air temperature is lower with the louvers fully opened, the heating capacity is still the same.

V. For Air Circulation Only (Refer To Figure 1, page 3).

- A. Turn the selector switch for "LOW FAN" or for maximum air flow, to "HIGH FAN".
- B. Position the louvers to the desired direction the discharge air is to flow.

NOTE

When the selector switch is in the "LOW FAN" or "HIGH FAN" position, the blower motor will operate continuously.

SECTION IV - MAINTENANCE

1. Owner

One of the biggest advantages to your new RV Products air conditioner is that the maintenance needed to keep the unit in good care is minimal. In fact about the only thing you, the owner, must take care of is the cleaning and replacement of the filters.

Filters are made from long life non-allergenic natural fibers which can be cleaned and reused, and which completely filter the circulated air when the air conditioner is in operation. If the filters are not cleaned at regular intervals, they may become partially clogged with lint, dirt, grease, etc. A clogged filter will produce a loss of air volume and may eventually cause an icing-up of the cooling (evaporator) coil.

IMPORTANT

Do not operate your air conditioner for extended periods of time without the filter installed.

An even more serious condition occurs when the air conditioner is operated without a filter. When this happens the lint, dirt, grease, etc. that are normally stopped by the filter are now accumulating in the cooling coil. This not only leads to a loss of air volume and a possible icing-up of the cooling coil, but could also result in serious damage to the operating components of the air conditioner.

We recommend that the filters be cleaned and changed at least every two weeks when the air conditioner is in operation.

Cleaning and/or changing the filters:

1. Disengage the two 1/4-turn fasteners that secure the ceiling assembly grille to the ceiling assembly (See Figure 2).
2. Lower the grille and filters from the ceiling assembly.
3. Take filters out and either clean or exchange with other filters (See Figure 2).
4. If the vehicle is equipped with a flush mount ceiling assembly, remove the four return air grill screws. Remove filter from grill and either clean or exchange with new filters.

NOTE

If replacement filters are necessary, the filters can be purchased from most RV Products Authorized Service Centers. It is recommended that spare filters be carried with the RV at all times to replace worn, torn or deteriorated filters.

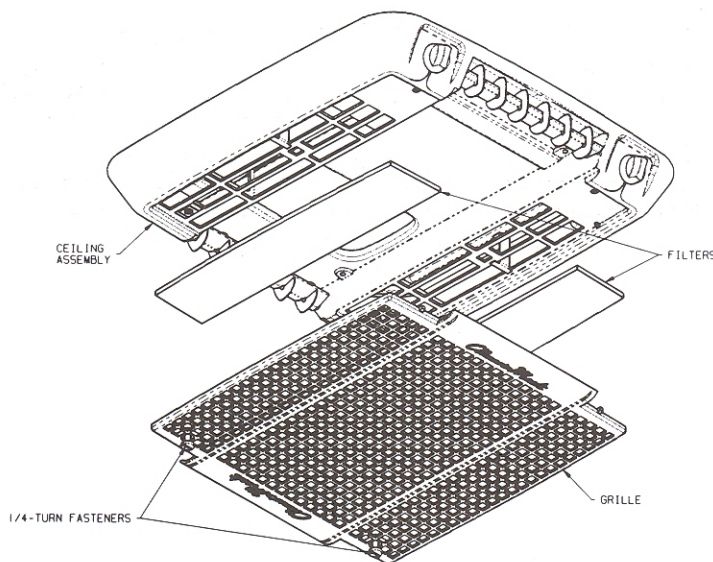


FIGURE 2

II. Service Person

- A. Electrical - All electrical work and/or inspection should be performed only by qualified service personnel. Contact your nearest RV Products Service Center if electrical problems should arise.
- B. Check Points - Failure to start or to cool the air are sometimes problems with air conditioning units. The RV Products RV air conditioner is designed to operate on 115 volt electrical power. If the compressor on the air conditioner fails to start, check with your RV Products Service Center to determine that the proper wire size is connected to the unit, the

proper circuit breakers are installed as protection devices on the electrical circuit and the proper sized extension cord is being used for the distance covered from the utility outlet to the RV. The required minimum wire size is #12 AWG for lengths up to 25 feet (larger wire size for greater distances). Each air conditioning unit must be protected with a 20 amp time delay fuse or circuit breaker.

If the air conditioner continues to trip off the circuit breakers, have an electrician check the starting amperage and running amperage on the unit. If the circuit breaker continues to trip off and the electrical consumption is found to be normal, it will require the replacement of the faulty circuit breaker.

If all electrical power to the air conditioner is normal but neither the fan or the compressor will operate, the connector plug located behind the ceiling assembly control box should be checked to determine whether it is faulty.

On the heating-cooling air conditioner models, if all electrical power to the unit is normal and the fan runs but you never get any heated air, then the electrical plug to the heating unit should be checked for a secure connection. If this does not correct the malfunction, the heating thermostat or limit switch may be faulty.

- C. Mechanical Integrity - The air conditioner should be inspected periodically to be sure that the bolts which secure the unit to the roof are tight and in good shape. Also, an examination of the plastic shroud covering the air conditioner on the top of the roof should be made periodically. Be sure the four mounting screws and washers are snug and holding the shroud to the air conditioner. Also examine the shroud to be sure it is not developing cracks or has suffered damage from impact.
- D. Lubrication

DANGER

DISCONNECT THE POWER SUPPLY TO THE UNIT BEFORE SERVICING TO PREVENT A SHOCK HAZARD OR POSSIBLE INJURY FROM MOVING PARTS.

The blower drive motor on some units may include oiling cups at the top of the motor. There is no requirement to oil the journals under normal operating conditions. However, if lubrication to the unit is desired, use only SAE 20 non-detergent type oil. DO NOT OVER OIL - three to four drops in each oil hole once a year is sufficient.

SECTION V - WALL THERMOSTAT IDENTIFICATION AND OPERATION


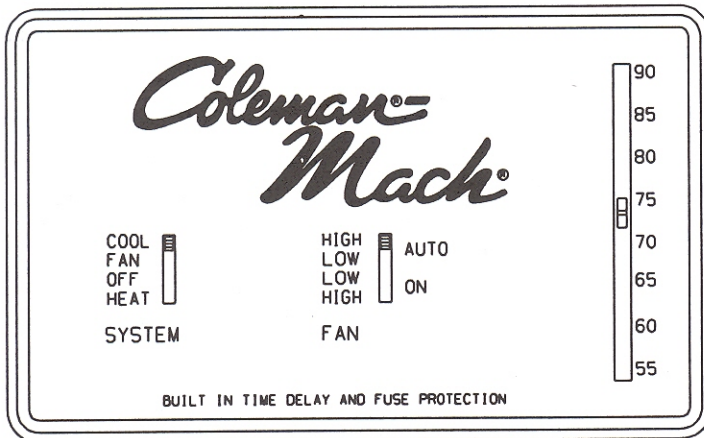


FIGURE 3

Heat/Cool Thermostat Shown.

“Cool Only” Model Has No Reference
To Heat On Face Of Thermostat.

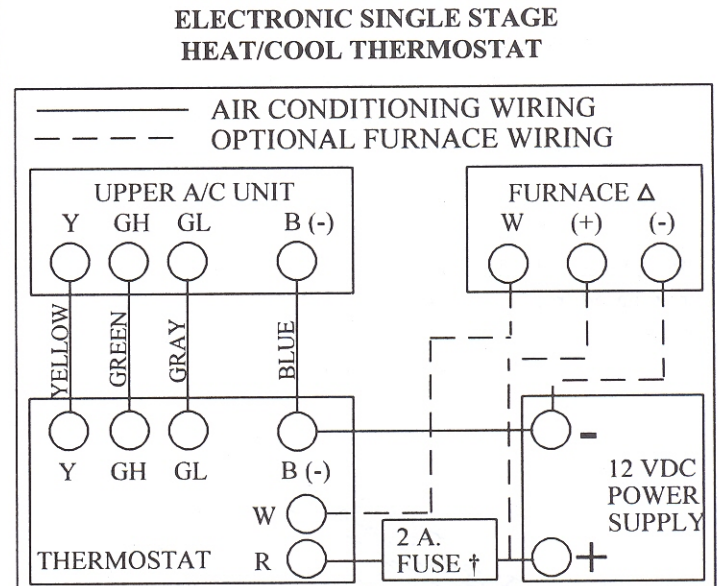

† Suggested Fuse To Protect Wiring Leading To Thermostat
Δ Not Found In “Cool Only” Applications

FIGURE 4

OPERATION

The chart below shows the system functions with the "Heat/Cool" thermostat. After the entire air conditioning system (and furnace system) is installed, check each position function. Disregard references to heat functions when using the "Cool Only" thermostat.

SHOWS POSITION OF SWITCH								OPERATION
SYSTEM				FAN				
* HEAT	COOL	OFF	FAN	AUTO HI	LO	ON LO	HI	
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	No functions occur.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Air conditioner fan runs at high speed continuously regardless of fan switch setting or setpoint. No other functions occur.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Air conditioner compressor and high speed fan cycle to satisfy setpoint.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Air conditioner compressor and low speed fan cycle to satisfy setpoint.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Air conditioner compressor cycles to satisfy setpoint. Air conditioner low speed fan runs continuously.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Air conditioner compressor cycles to satisfy setpoint. Air conditioner high speed fan runs continuously.
<input checked="" type="checkbox"/> *	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Furnace and furnace blower cycles to satisfy setpoint. Furnace blower operates from sequencer or time delay in furnace. Air conditioner blower does not run.
<input checked="" type="checkbox"/> *	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
<input checked="" type="checkbox"/> *	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
<input checked="" type="checkbox"/> *	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	

All cooling functions controlling to setpoint have a short cycle protection time delay of 3 minutes. There will be no delay if the cycle **OFF** time exceeds 3 minutes.

* There is no heat switch or furnace function available with the "Cool Only" thermostat.

SECTION VI - WARRANTY SERVICE

Let's face it. Sometimes even the best products may need service. To obtain warranty service on your RV Products air conditioner, contact your selling dealer or dial toll free 1-877-430-8084 to locate the Authorized Service Center closest to you. You may also access our web site on the Internet at www.rvcomfort.com for answers to the most frequently asked questions and service center locations.

RV Products support help may be accessed by E-mail at RVPSupport@Airxcel.com.

All written correspondence should be directed to:

RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204

IMPORTANT

- Carefully read your limited two year product warranty which is packed with the product.
- An optional three year extended parts only contract is available at an additional cost of \$89.95. To obtain this optional three years parts contract, fill out the application card stapled to the front of this envelope. Please mail the card and a check or money order to the address above. Applications must be made **within ninety (90) days** of the original purchase.
- Inquiries about your RV Products air conditioner must include the model and serial numbers and the date of purchase. The model and serial numbers can be found on the I.D. label located on the air conditioner basepan return air opening at the bottom of the roof unit. This information may also be found on the air conditioner rating plate.

OPTIONAL THREE YEAR EXTENDED PARTS CONTRACT



NOT RENEWABLE

(OPTIONAL at ADDITIONAL COST)

NOT REFUNDABLE

A/C MODEL NUMBER _____ A/C SERIAL
NUMBER _____
CONTRACT # _____ EFFECTIVE CONTRACT
DATE _____

1. This Extended Parts Contract must be purchased within 90 days of the original (first) retail purchase of the covered air conditioner. The consumer must establish these dates by copy of the sales receipt. During the term of this Extended Parts Contract, RV Products agrees to furnish without charge any replacement parts required for the covered air conditioner because of defects in material or workmanship. This Extended Parts Contract is for a term of three years and begins the day following the date on which the original two-year new product warranty expires. This Extended Parts Contract is not transferable to any subsequent purchaser of the covered air conditioner.
2. This Extended Parts Contract does not cover any labor charges or other charges.
3. The Extended Parts Contract duration shall be calculated as follows:
 - 3.1 The contract duration on replacement parts furnished under this parts replacement contract shall be for the unexpired duration under this contract.
 - 3.2 If the air conditioner is installed as original equipment in a recreational vehicle, the duration shall begin two (2) years from the date of the original purchase of the recreational vehicle.
 - 3.3 If the air conditioner is installed in a recreational vehicle previously purchased by the consumer, the duration shall begin two (2) years from the date of the purchase of the air conditioner.
 - 3.4 The consumer must establish these dates by presenting this certificate at the time the claim is made.
4. The consumer should proceed as follows to obtain contract performance:
 - 4.1 Consult your selling dealer or dial toll free 1-877-430-8084 for the name, address and telephone number of the nearest Authorized RV Products Service Center. Schedule appointments for service assistance. It is the contracted consumer's responsibility to transport the air conditioner to the servicers location. Collect service agreement calls will not be accepted by RV Products or field servicers.
 - 4.2 All warranty parts covered by this Extended Parts Contract shall be obtained from RV Products.

EXCEPTIONS AND EXCLUSIONS

5. To the extent any or all of the following exclusions or any other provisions of this Extended Parts Contract are prohibited by any federal, state or municipal law, and cannot be preempted, they shall not be applicable.
 - 5.1 **IN THE EVENT THERE ARE OTHER APPLICABLE PARTS REPLACEMENT CONTRACTS, THEN THIS EXTENDED PARTS CONTRACT IS SECONDARY TO THOSE CONTRACTS AND ONLY PARTS EXCLUDED UNDER THE OTHER CONTRACT AND INCLUDED UNDER THIS EXTENDED PARTS CONTRACT WILL BE COVERED.**
 - 5.2 **THIS EXTENDED PARTS CONTRACT DOES NOT COVER CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY.**
 - 5.3 This Extended Parts Contract applies only to products sold at retail in the United States.
 - 5.4 This Extended Parts Contract does not cover damages caused by mishandling, neglect, lightning, corrosive atmosphere, collision, improper installation, improper application or improper energy supply.
 - 5.5 This Extended Parts Contract does not cover damages caused by failure to perform normal and routine maintenance as set out in the operation and maintenance instructions.
 - 5.6 This Extended Parts Contract does not cover damages or equipment failure caused by the use of non-RV Products parts or components.
 - 5.7 This Extended Parts Contract shall not apply if the nameplate is removed or defaced.
 - 5.8 This Extended Parts Contract shall not apply if the vehicle on which the air conditioner is installed is used for maritime activities.
 - 5.9 This Extended Parts Contract shall not apply if the vehicle on which the air conditioner is installed is used for commercial purposes involving off highway travel.
 - 5.10 This Extended Parts Contract shall not apply if the air conditioner is installed on a semi-tractor and/or commercial trailer.
 - 5.11 This Extended Parts Contract does not include shrouds and filters.

RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204

1970L635 (3-00) PP



LIMITED TWO YEAR AIR CONDITIONER WARRANTY

1. These products are warranted to the retail consumer for two (2) year against defects in material and workmanship. The warranty is transferable from owner to owner.
 2. Any defective parts will be repaired. All replacements and exchanges will be made using new, remanufactured or refurbished parts or components at the option of RV Products. RV Products will pay its established warranty labor rates to the RV Products Authorized Service Centers or Servicing Dealers who have service agreements with RV Products for repairs or replacements made under this warranty. The warranty covers transportation charges for the shipment of replacement parts to the service center.
 3. The warranty duration shall be calculated as follows:
 - 3.1 The warranty on repaired or replaced parts furnished pursuant to this warranty shall be for the unexpired duration of the original warranty.
 - 3.2 If the product is installed as original equipment on a vehicle, the warranty period shall begin on the date of the original purchase of the vehicle.
 - 3.3 In all other instances, the warranty shall begin on the date of the products purchase.
 - 3.4 The Consumer must establish these dates by presenting legible papers at the time the warranty claim is made showing the applicable purchase date.
 4. The Consumer should proceed as follows to obtain warranty performance:
 - 4.1 Consult your selling dealer or dial toll free 1-877-430-8084 for the name, address and telephone number of the nearest Authorized RV Products Service Center. Call the Service Center and report the problem. Only Authorized Service Centers may perform warranty obligations during the two year warranty period. Service performed by non-authorized service personnel may void all warranty rights. If local authorized service cannot be obtained or you cannot obtain proper service under the terms of this warranty, please write to: RV Products, P.O. Box 4020, Wichita, Kansas 67204 or call 316-832-4357.
 - 4.2 The recreational vehicle must be taken to the Service Center for required service. There are no provisions for mileage allowance, air conditioner removal or transportation expenses.
 - 4.3 All payment for in warranty expenses shall be made by RV Products to the Service Center and not to the Consumer.
- EXCEPTIONS AND EXCLUSIONS**
5. To the extent any or all of the following exclusions or any other provisions of this warranty are prohibited by any Federal, State or Municipal laws, and cannot be preempted, they shall not be applicable:
 - 5.1 **THERE ARE NO OTHER EXPRESSED WARRANTIES EXCEPT AS SET OUT ABOVE AND ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE NO LONGER THAN THE DURATION OF THE EXPRESSED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.**
 - 5.2 **THIS WARRANTY DOES NOT COVER CONSEQUENTIAL DAMAGE, INCIDENTAL DAMAGES OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**
 - 5.3 This warranty applies only to products sold at retail in the United States and Canada.
 - 5.4 This warranty does not cover damage caused by mishandling, neglect, lightning, corrosive atmosphere, improper installation, improper application or improper energy supply.
 - 5.5 This warranty does not cover damages caused by failure to perform normal and routine maintenance as set out in the operation and maintenance instructions.
 - 5.6 This warranty does not cover damages or equipment failure caused by the use of non-RV Products parts or components.
 - 5.7 This warranty shall not apply if the nameplate is removed or defaced.
 - 5.8 This warranty shall not apply if the vehicle on which the air conditioner is installed is used for maritime activities.
 - 5.9 This warranty shall not apply if the air conditioner is installed on semi-tractors and/or semi-tractor trailers.
 - 5.10 This warranty shall not apply if the vehicle/structure on which the air conditioner is installed is used for commercial purposes involving off highway travel.
 - 5.11 This warranty does not cover air conditioner damage or component failures that are the result of transportation or application vibration.
 6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204